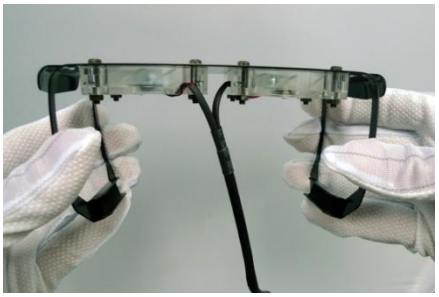

Push both stands of the fan toward each other.

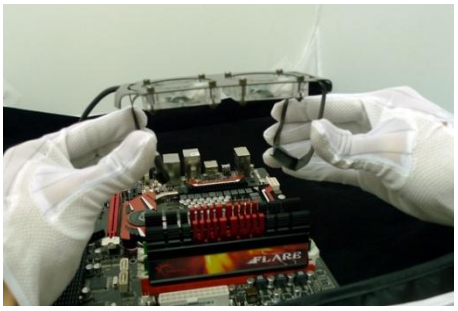

Buckle the braces on both sides of the memory slots.

Make sure the braces are firm and immovable from the memory slots.

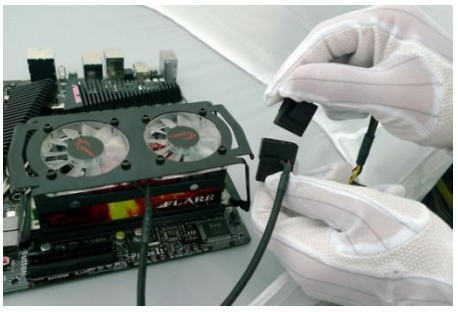

Plug the power connector of the fan into a 4-pin molar connector from your power supply.